

## KH 80 ANSWERS

### Why is the KH 80 DSP a DSP monitor and what are the advantages and disadvantages?

DSP components have become so cost efficient that they rival analog designs. Additionally, DSP brings many more possibilities for the user in terms of control, flexibility and product performance, especially when combined with a control network. Furthermore, DSP components are now so good that self-generated noise and other audio artifacts are comparable to or better than analog solutions.

Compared to an analog loudspeaker, the only disadvantage of a well-designed DSP system is latency: it takes time for the signal to be converted to digital, pass through the signal processing and then be converted back to an analog signal for the power amplifiers. We have done our best to keep this time short enough that it does not present a problem in practical installations.

### Why is there is no ground lift switch on the KH 80 DSP?

The KH 80 DSP has a two-pin mains connection because it is double insulated. As there is no earth pin on the mains connector, there is no possibility for a ground loop to occur, therefore a ground lift switch is not needed. If there is a mains hum, it is due to incorrect wiring of the audio cables and/or a poor quality (not gold plated) ground connection on the connectors. The most common situation in which a mains hum will be heard is when the KH 80 DSP is connected to a laptop.

### My KH80 does not go into standby

The KH80 goes into standby depending on the applied input level, standby time, the output gain level settings and the position of the “Settings” switch on the KH80.

- In local mode, the standby time is fixed to 90 mins. The output level depends on the switch settings on the back of the loudspeaker.

Ensure that standby is switched on on the backplate.




- In network mode, the standby time (time until the loudspeaker goes into standby if the input level is below the threshold) can be set individually.



The threshold (level below which the KH80 goes into standby) can be adjusted individually.


The output level can be adjusted individually.

Ensure that standby is switched on on the backplate.

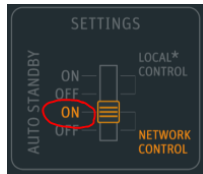

If the KH80 switches on again or doesn't go into standby, it may be that your source is still producing some noise or spikes that wake the loudspeaker up again. You can test whether standby mode is working by connecting a short XLR cable to the input of the loudspeaker with no further device connected to it.

- In local mode:  
Set the output level of the KH80 to 100 dB SPL. The loudspeaker should then go into standby after 90 mins.
- In network mode:
  - Set the standby time to the desired time.
  - Set the standby level to 30 dB.Activate standby on the backplate (\*must be off)

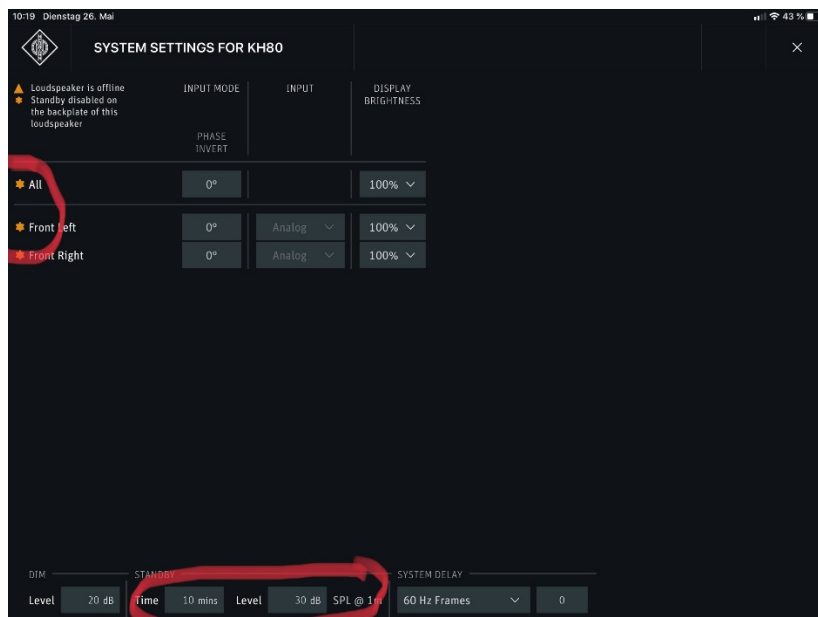




In general you should keep the gain settings on the monitor as low as possible (e.g. gain potentiometer to max, output gain to 94 or 100 dB SPL) and the level of your source as high as possible in order to get to the best S/N ratio and keep induced disturbances as low as possible.

Since the loudspeaker continuously monitors the input signal, even spikes from the source or induced into the cable could prevent the loudspeaker from going into standby. Ensure that no signal peaks from the source or spikes induced into the cabling can wake up the monitor.



### Why does my KH 80 DSP hum when connected to a laptop?

Audible mains humming when connecting a KH 80 DSP to a laptop is quite common. This is due to incorrect cable wiring and/or poor-quality audio ground connections. Below is the cable wiring diagram that will avoid mains humming. In addition, use gold plated connectors to ensure a good ground connection. Unfortunately, to save money, most commercially available cables are incorrectly wired using a single core cable to each loudspeaker and in many cases, good quality gold plated connectors are not used.

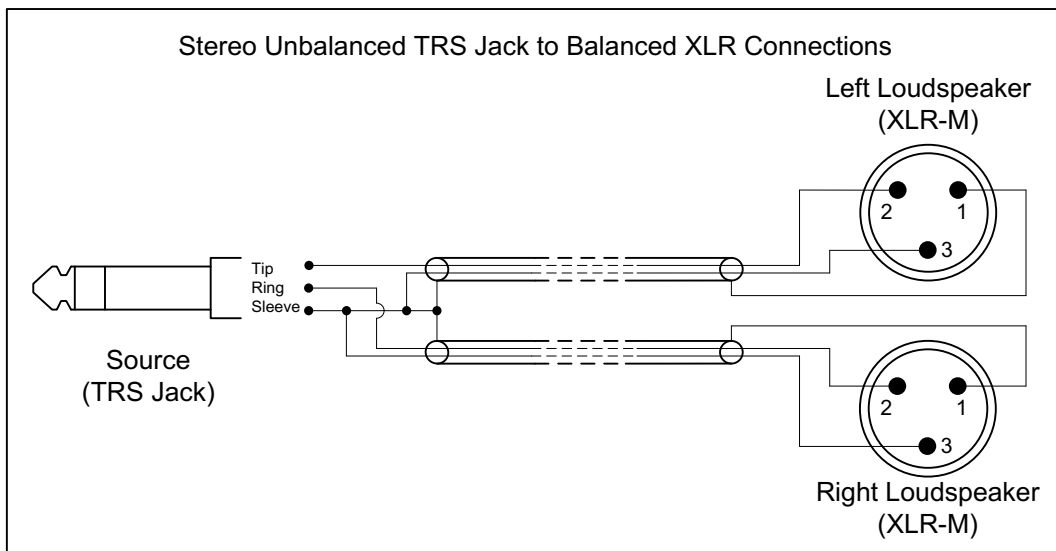



### How do I connect the KH 80 DSP to unbalanced outputs?

It is highly recommended that balanced connections are used whenever possible. Failing that, here are the wiring diagrams for the cables:

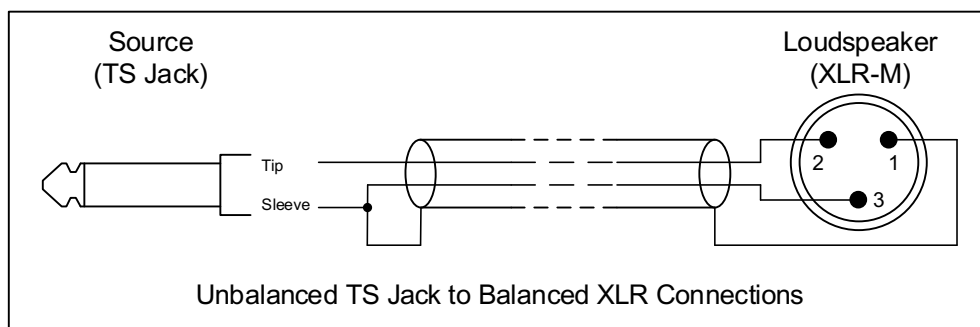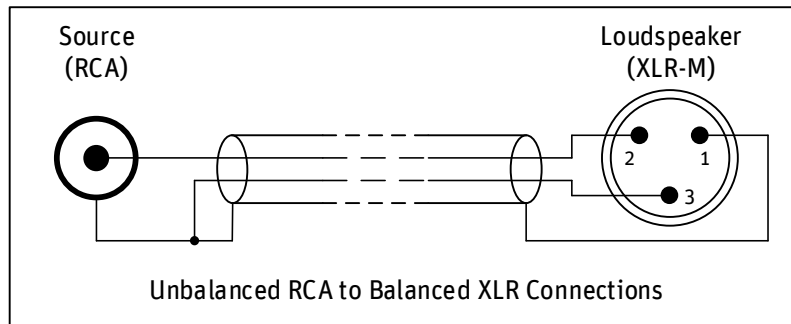

As the quality of the ground connection in unbalanced cabling is more important than in proper balanced cabling, gold plated connectors must be used.

Unfortunately, to save on the cost of using two-core cables, many commercially available cables are wired in this way and should not be used:

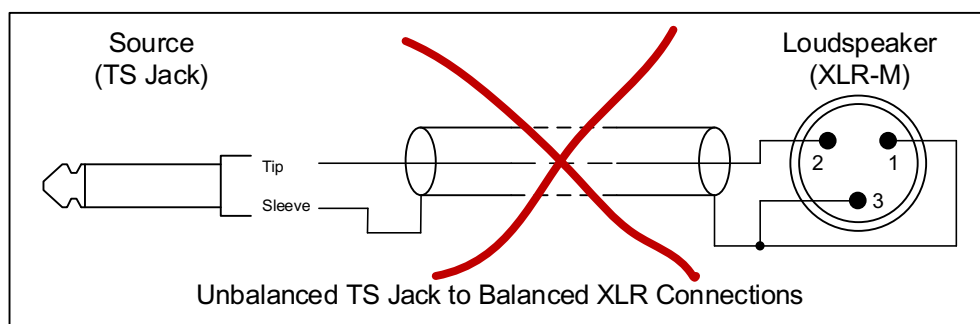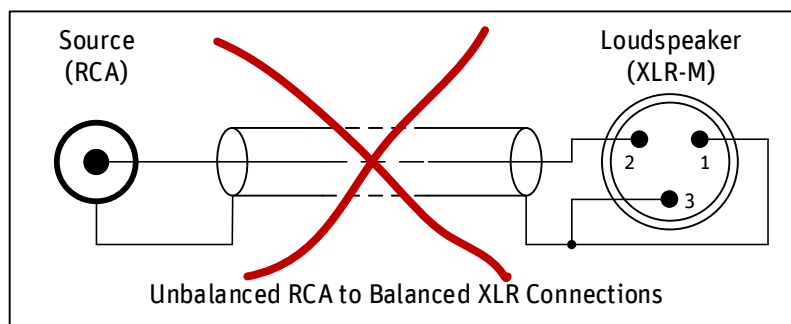

### What are the differences between the analog KH 120 and the KH 80 DSP?

Feature	KH 80 DSP	KH 120
Bass driver	4"	5.25"
Magnetic shielding	No	Yes
Amplifiers	120 / 90 W	80 / 80 W
Bass extension (-3 dB)	57 Hz	52 Hz
Max SPL	102.8 dB	105.1 dB
Controller	DSP at 48 kHz	Analog
Crossover	1.8 Hz, 8 <sup>th</sup> order	2.0 Hz, 4 <sup>th</sup> order
Back panel acoustical controls	Low-mid	Bass, Low-mid, Treble
Internal acoustical controls	8 x full parametric IIR + low / high shelf global balance	None
Phase correction	Yes	No
Latency	2 ms or 0.65 ms	0 ms or 0.22 - 1.85 ms in D version
Delay	0 - 70 ms	0 - 409.5 ms (D version only)
Input	XLR/Jack	XLR
Standby function	Yes	No
Max power consumption	180 W	200 W
Size	233 x 154 x 194 mm (7.0 liters)	277 x 182 x 220 mm (9.7 liters)
Weight	3.4 kg	6.4 kg

For most other functions there are no differences or any differences are very small.

### Can I use the KH 80 DSP in the same system as analog products?

Yes, but you have to be careful for two reasons:

- The phase response of our analog products is minimum-phase throughout the pass band of the loudspeaker, whereas the phase response of the KH 80 DSP is linear phase above 170 Hz.
- Additionally, DSP systems have latency due to the conversion and the phase correction (2 ms). You can align the KH 120 D, KH 310 D, or KH 420 with a fitted DIM 1 accessory by using the delay feature. If the distances are different, this should also be taken into account: loudspeakers that are closer should be delayed more.

### How do I integrate a KH 805 or KH 810 subwoofer with the KH 80 DSP?

Cable the KH 80 DSP in the same way as you would cable any other loudspeaker to the KH 805 or KH 810 – see operating manual for details. Calibrate the KH 80 DSP in whichever way you wish (Automatic Alignment, Guided Alignment, Manual Alignment or using the back-panel switches) and then calibrate the subwoofer in the usual way as described in



the operating manual. Compared to an analog loudspeaker such as the KH 120, you will end up with a slightly different phase control setting (probably only 45 degrees different). This is due to the latency of the conversion and signal processing, however the end result will still be good if you follow the instructions properly.

### **What type of router can I use with Neumann.Control and the KH 80 DSP?**

Any standard router should work. The only requirements are:

- Wi-Fi is switched on if Neumann.Control is running on a tablet or if the computer is not connected via an Ethernet cable.
- Device detection must be switched on so that the KH 80 DSP can be found automatically on the network. This function can go under a number of different names, such as MDMS, UPnP, IGMP.

### **What type of switch can I use with the KH 80 DSP?**

There are two types of network switches: managed and unmanaged. Either will work fine. If the network switch can provide “power over Ethernet” (PoE), it is recommended to turn it off.

### **What type of network cable can I use with the KH 80 DSP?**

Any regular network cable will work. Crossover cables can also be used, as the crossover wiring will be automatically accommodated. The data rate is not high (<10 Mb/s) on the network connection so CAT-5 is sufficient. CAT-5e, CAT-6 and higher cables will also work.

### **What is the enclosure material of the KH 80 DSP?**

We have used a polycarbonate composite material for the cabinet as it provides a good balance between these features:

- Ability to make the desired shapes: waveguide, corners, rear panel, internal fixings
- Homogenous (even density) material
- Good acoustic behavior
- Unit cost of parts
- Good handling in manufacturing
- Robust
- Can be recycled